

Shown in Compressor RUN Mode.

Check valve & relay open when pressure is at set point

