



Operation Guide SuperSlide II PowerSlide

© 2/07 Kwikkee #3010000926 Rev. 0A



Super Slide II PowerSlide Operation Guide

Contents

Introduction	1
Safety Precautions	1
Extending Your Tray	2
Stowing Your tray	2
Program Remote	2
Troubleshooting	3
Manual Retract	3
Warranty	4

Introduction

This coach is equipped with a SuperSlide II PowerSlide mechanism from Kwikkee products. PowerSlide utilizes a quad motor system to move the cargo tray between the stowed drivers and passenger side of the coach.

The PowerSlide is made of an inner tray which rolls on a set of outer guide rails. The tray is designed to move 60" out in both directions of travel. Power to move the tray is provided by engaging urethane covered drive rolls with the channel mounted on the side of the tray. The drive rolls are tensioned, to allow for wear in the urethane and maintain good contact. To prevent movement during coach travel, a center lock mechanism is employed to lock the tray into its stowed position.

Operating Safety Precautions



CAUTION
Make sure the area is clear of all persons or
obstructions before operating

CAUTION
READ ALL
OPERATING INSTRUCTIONS
FIRST BEFORE USING YOUR
POWERSLIDE CARGO TRAY.

Prior to extending or retracting the cargo tray, take a moment to ensure the following:

1. Open the luggage compartment doors to make sure that there are no obstacles that could interfere with the tray's movements, either in or out to either side.
2. Make sure that there are no obstacles on the outside of the coach that would interfere with tray movement or be damaged due to tray movement.
3. Check to ensure that stored gear has not shifted and that no obstructions exist between the inside of the compartment and the stowed gear.



230 Davidson Avenue
Cottage Grove, OR 97424
541-942-3888
www.kwikkee.com

Note: To stop the tray, release the rocker switch or momentarily press any button on the remote control panel.



Extending Your Cargo Tray



CAUTION

See operating safety precautions before proceeding.

1. To extend the tray from the stowed center position, use one of the following two options.
 - Push and hold the rocker switch provided by the coach manufacturer in the desired direction.
 - Momentarily press the arrow on the remote control in the desired direction.
2. The tray will continue to travel to the full extension point or until either the rocker is released or any button on the remote control is pressed again.
3. To extend the tray from one side to the other, the tray will need to be stowed first by either pressing "Stow" or the direction of travel arrow on the remote control. If the rocker switch is used, after the tray is centered, the rocker must be released before the tray can be further extended.

Stowing Your Cargo Tray



CAUTION

See operating safety precautions before proceeding.

1. To stow the cargo tray, press the stow button on the remote control or the arrow in the desired direction required to stow the tray. The slide will stow automatically.
2. If using the rocker switch to retract the cargo tray, press and hold the switch. The cargo tray will momentarily pause just before centering. Continue to hold the rocker switch down until all action stops.

Programming Your Remote

To program the power module to the RF remote transmitter, insert the eraser end of a pencil through the hole in the top of the ABS cover on the power slide, as shown in figure 1. The hole is located on the passenger top side of cover.

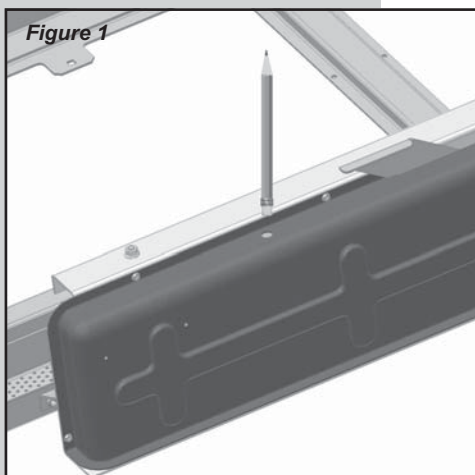


Figure 1

With the eraser end of the pencil, press the switch on the top of the control. When pressed, a red LED light will start to flash. The LED can be seen through the hole in the cover. Once flashing, select which set of buttons you would like to have correspond to this slide. Press any button on the remote that corresponds to Slide 1 or Slide 2. this will program the slide to that remote setting.

Troubleshooting

1. Unit fails to extend or retract using remote control.
 - Low battery.
 - Out of range, move closer to bay.
 - Potential radio interference.
2. My tray extended when my neighbor runs his tray.
 - Change your remote code (see section on setting code).
3. The unit pauses before centering then goes forward and stops.
 - This is normal, it is allowing time for the center latch to move.
4. Unit is not running correctly after working before.
 - May be caused by dead battery. Position tray in center, then reboot system by cycling power to tray.

Manually Retracting Your Cargo Tray



CAUTION


Release lever is spring loaded. Use caution when releasing to prevent injury.

In the event the cargo tray will not function, a manual release lever may be actuated to retract the tray for service.

The lever must be rotated toward the driverside of the coach about 90°. This will allow you to move the tray in for travel.

Once the tray is centered, return the release lever to its normal position to lock the tray in place.

The manual release is meant as a temporary override and service should be scheduled as soon as possible.

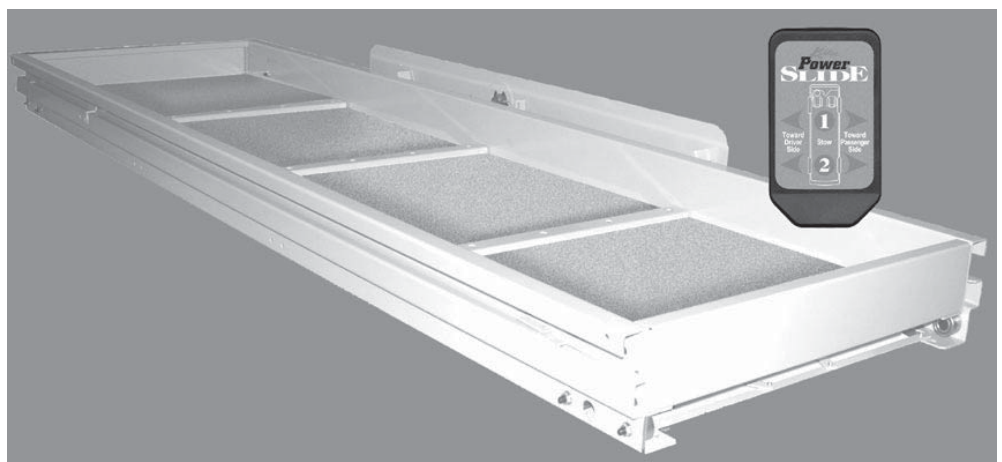

For questions regarding these warranty procedures or technical assistance, call 1-800-736-9961.

Be sure to visit us online for updates, and downloadable documents.

**Go to:
www.kwikee.com**



230 Davidson Avenue
Cottage Grove, OR 97424
541-942-3888
www.kwikee.com

Warranty

1. We warrant that the equipment is free from defects in material and workmanship under normal use and service. The provisions of this warranty shall not apply to any equipment that has been subject to misuse, negligence, alteration, accident, improper installation, normal deterioration due to wear, or has been repaired outside our place of business in any way as, in our reasonable judgment, to adversely affect its performance and reliability.
2. Our obligation under this warranty is limited to repairing or replacing, at our option, any product that is returned to our place of business and when in its examination shall disclose to our reasonable satisfaction that it is defective. The repair or replacement of the defective parts under this warranty will be made without charge for parts or labor. Shipping charges for returning parts to Kwikee shall be the responsibility of the customer. Kwikee will pay shipping charges when returning warrantable parts to the customer. Kwikee will not accept C.O.D. shipments of any returned goods.
3. The warranty is effective as of the date of sale and extends one year for parts and labor on mechanisms and one year for finish. Since it is the responsibility of the owner to verify the original purchase date, Kwikee recommends that a bill of sale or sales receipt be kept for that purpose.
4. The duration of any implied warranty of merchantability or fitness for a particular purpose shall be limited in all respects to the duration of the limited warranty, and the warranty described above shall be in lieu of any other express warranty. Some states do not allow limitations on how long implied warranties last, so the above limitations may not apply to you. We neither assume or authorize any other persons to assume any other liability in connection with our products.
5. The buyer's sole and exclusive remedy against the seller shall be for the repair or replacement of defective merchandise as provided above. No other remedy, including but not limited to, incidental or consequential damages for lost profits, lost sales, injury to property or any other incidental or consequential loss, shall be available to him. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection there with.
6. Kwikee will not, under any circumstances, reimburse the cost of warranty parts purchased from sources other than Kwikee.
7. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.