

SEAL REPLACEMENT ROOM EXTENSION CYLINDERS

1. Remove the room cylinder.
2. Unscrew the rod guide from the main cylinder.
3. Clean paint off cylinder rod before sliding rod guide off.
4. Replace the existing o-ring and back-up with the polyseal.
5. Do not remove the wear ring.
6. Replace the existing cylinder o-ring and wiper.
7. Apply light coat of grease to the o-ring, polyseal and wiper.
8. Screw the rod guide onto the cylinder and tighten.
9. Replace the cylinder assembly and test.

